


KULLANIM KILAVUZU

Değerli Müşterimiz,
Bu kullanım kılavuzu satın almış olduğunuz ürünün gerekli montaj bilgilerini içermektedir. Güvenliğiniz ve ürün ömrü için kullanım kılavuzunda yer alan güvenlik uyarıları ve garanti şartları talimatlarına uyunuz. Ürünle alakalı problem yaşamaz durumda kılavuzda mevcut olan iletişim bilgileri üzerinden bizlere ulaşabilirsiniz.

MONTAJ ŞEMASI

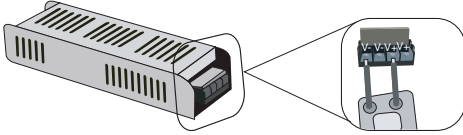

ŞERİT LED TRAFÖ	YL22-1012 1 AMPER	YL20-0036 3 AMPER	YL20-0060 5 AMPER	YL20-0120 10 AMPER	YL20-0150 12.5 AMPER	YL20-0200 16.5 AMPER	YL20-0250 20 AMPER	YL20-0360 30 AMPER	YL20-0500 40 AMPER
2835 60 LED	2,5 MT	8 MT	12,5 MT	25 MT	30 MT	40 MT	50 MT	75 MT	100 MT
2835 120 LED	1 MT	3,5 MT	6 MT	12,5 MT	15 MT	20 MT	25 MT	37,5 MT	50 MT
2835 240 LED	-	2 MT	3 MT	6 MT	8 MT	11 MT	13 MT	20 MT	25 MT
4040 60 LED	-	2,5 MT	4 MT	8 MT	10 MT	13,5 MT	16,5 MT	25 MT	33 MT
5050 60 LED	-	2,5 MT	4 MT	8 MT	10 MT	13,5 MT	16,5 MT	25 MT	33 MT
5630 60 LED	-	2 MT	3 MT	6 MT	8 MT	11 MT	13 MT	20 MT	25 MT

MONTAJ TALİMATLARI

- 1- Ürünün montajından önce elektrik akımını kesiniz.
- 2- Ürün 220-240V ve 50-60Hz değerlerinde çalışması için tasarlanmıştır. Bu değerler haricinde bir voltaj ve frekansla çalıştırmayınız.
- 3- Ürünün kutusunda koruma sınıfı (IP) belirtilmiştir. Ürün koruma sınıfının belirttiği ortam ve iklim koşulları haricinde kullanılmamalıdır.
- 4- LED Sürücünün şerit LED metre uygulaması montaj şemasındaki tabloda belirtilmiştir.
- 5- LED Sürücümüz yüksek akım korumalıdır.
- 6- Montaj işlemi tamamlandıktan sonra elektrik akımını açabilirsiniz.

GÜVENLİK VE UYARILAR

- Kullanma kılavuzunu okumadan paneli bağlamayınız.
- Ürün montajından önce elektrik akımını kesiniz.
- Ürün koruma sınıfının belirttiği şartlar dışında ürünü kullanmayınız.
- Panelin montajı mutlaka uzman kişiler tarafından gerçekleştirilmelidir.
- Güç kablolarının hasarlı olduğu durumlarda ürünü kullanmayınız.
- Ürünü elektrik kaçağı olabilecek yerlerde kullanmayınız.
- Ürünün eksiksiz olduğundan ve doğru bağlantı kurulduğundan emin olunuz.

GARANTİ ŞARTLARI

- Ürünlerimiz 2 yıl birebir değişim garantilidir.
- Garantinin geçerli olabilmesi için parçaların eksiksiz olarak teknik servis ekibine teslim edilmesi gerekmektedir.
- Ürünün ayıplı olması durumunda; 6502 sayılı Tüketicinin Korunması Hakkında Kanun'un 11. maddesi gereği; ücretsiz tamirin yapılması, tamiri yapılamayan ürünün yeni ürüne değiştirilmesi yaptırımları uygulanır.
- Kullanım talimatları dışında kullanılan ve kullanıcı hatasına maruz kalan ürünler garanti kapsamı dışındadır.

Showroom:

Bereketzade Mah. Sair Ziya Paşa Cad. No:31/A/PK. 34421 Karaköy, Beyoğlu / İstanbul
Tel: 0212 244 84 22-23 Pbx
Mail: info@noas.com.tr

Fabrika:

Beylikdüzü OSB Mh. Mustafa Kurtoglu Cd. No.23 (Bakırçılar Demirciler Sanayi Sitesi)
Beylikdüzü / İstanbul
Tel: 0212 879 03 53
Web: www.noas.com.tr



AEEE yönetmeliğine uygundur.




USER MANUAL

Dear Customer,

This user manual contains the necessary installation information of the product you have purchased. For your safety and product life, follow the safety warnings and warranty conditions instructions in the user manual. If you have a problem with the product, you can contact us via the contact information available in the user manual.

ASSEMBLY DIAGRAM

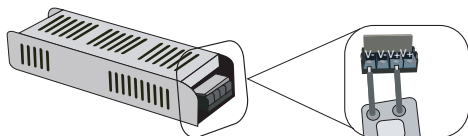

LED STRIP DRIVER	YL22-1012	YL20-0036	YL20-0060	YL20-0120	YL20-0150	YL20-0200	YL20-0250	YL20-0360	YL20-0500
	1 AMPER	3 AMPER	5 AMPER	10 AMPER	12.5 AMPER	16.5 AMPER	20 AMPER	30 AMPER	40 AMPER
2835 60 LED	2,5 MT	8 MT	12,5 MT	25 MT	30 MT	40 MT	50 MT	75 MT	100 MT
2835 120 LED	1 MT	3,5 MT	6 MT	12,5 MT	15 MT	20 MT	25 MT	37,5 MT	50 MT
2835 240 LED	-	2 MT	3 MT	6 MT	8 MT	11 MT	13 MT	20 MT	25 MT
4040 60 LED	-	2,5 MT	4 MT	8 MT	10 MT	13,5 MT	16,5 MT	25 MT	33 MT
5050 60 LED	-	2,5 MT	4 MT	8 MT	10 MT	13,5 MT	16,5 MT	25 MT	33 MT
5630 60 LED	-	2 MT	3 MT	6 MT	8 MT	11 MT	13 MT	20 MT	25 MT

ASSEMBLY INSTRUCTIONS

- 1- Cut off the electrical current before assembling the product.
- 2- The product is designed to operate at 220-240V and 50-60Hz. Do not operate with a voltage and frequency other than these values.
- 3- The protection class (IP) is indicated on the box of the product. It should not be used outside of the ambient and climatic conditions specified by the protection class.
- 4- The LED strip meter application of the LED Driver is specified in the table in the assembly diagram.
- 5- LED Driver is high current protected.
- 6- After the assembly process is completed, you can turn on the electric current.

SAFETY & WARNINGS

- Do not connect the panel without reading the user manual.
- Cut off the electrical current before assembling the product.
- Do not use the product other than the conditions specified by product protection class..
- Installations of the panel must be carried out by specialists.
- Do not use the product if the power cables are damaged.
- Do not use the product in places where electricity leakage may occur.
- Make sure the product is complete and correctly connected.

WARRANTY CONDITIONS

- Our products are guaranteed for one-to-one replacement for 2 years.
- In order for the warranty to be valid, the parts must be delivered to the technical services completely.
- In case the product is defective; Pursuant to Article 11 of the Consumer Protection Law No:6502; Sanctions are applied to make free repair, to replace the product that cannot be repaired with a new product.
- Product that are used outside the instructions for use and exposed to user error are not covered by warranty.

Showroom:

Bereketzade Mah. Sair Ziya Paşa Cad. No:31/A/PK. 34421 Karaköy, Beyoğlu / İstanbul
Tel: 0212 244 84 22-23 Pbx
Mail: info@noas.com.tr

Factory:

Beylikdüzü OSB Mh. Mustafa Kurtoglu Cd. No.23 (Bakırcılar Demirciler Sanayi Sitesi)
Beylikdüzü / İstanbul
Tel: 0212 879 03 53
Web: www.noas.com.tr



It complies with the WEEE regulation.